

Set Up Manual

Option 1 - Standard Install

Standard cable without Cable Box direct to TV

This application requires no additional equipment. After the installation of the TV, attach TV cable and power cable. Cabinet is controlled by remote; TV is also controlled by TV remote.

Option 2 - Standard Install with Cable Box or DVD Player

Attach cable box and/or DVD player to TV into nightstand

This application requires the consumer to obtain a 15' cable that will go from TV under bed to component cabinet.

Option 3 - Installation with Cable Box and other components hidden under bed.

This application requires

1. small piece of plywood to place components on to avoid resistance from carpet
2. IR Repeater System featured below

This system is easy to install and will allow up to 4 components to be operated remotely with only repeater eye visible in room.



Optional Equipment

IR Repeater System

Easily Installs into any TheaterLift Cabinet and controls all components within the cabinet with doors closed.

Supplied in System:

- Table Top Sensor
- Sensor Cable
- Main System Unit
- 4 Microflaskers
- 12 V DC Power Supply

SYSTEM PRICE: **\$199.95**

Purchase a
**Touchstone
Cabinet**
and receive an
**IR Repeater
System**
for
1/2 price!

Bedroom Lift Cabinets - 4 models available





fig 1

Touchstone Product Assembly

A. Unpacking

1. Remove all screws from bottom of pallet (fig 1) and lift wood frame from around carton (fig 2). Slide or lift the box off the pallet.



fig 2

2. With utility knife, cut 1/2" from base of box, all the way around the perimeter of the box. Make sure you don't cut higher or deeper than 1" as you could damage the cabinet (fig 3). Lift box from cabinet. Use empty box for disposal of packing materials F (fig 4).



fig 3

3. Remove all styrofoam blocks. Vacuum interior of cabinet to remove final styrofoam pellets.

4. Place cabinet in area to be used, but leave it 2 feet away from wall so there's room to install the TV (fig 5).

***Note:** Review the component area on back of TV. On some TVs, the components end up behind the "L" bracket and require spacers. Multiple sizes of these spacers are included. These spacers should be installed on the TV before the clips are secured. We provide most commonly used metric bolts to attach the 4 clips to a TV. If the factory supplied bolts do not fit, you will need to acquire the proper size bolts.



fig 4



fig 5

5. Place TV brackets and components in a safe place. (fig. 6)



fig 6

6. Lift top up from front. (Caution: Make sure lid doesn't slam shut.) Remove "L" bracket from the lift machine (fig 7). Three bolts secure this piece.

B. TV Installation

1. Lay TV face down on soft blanket or similar piece.

2. Remove bottom stand from TV (if still attached)

3. Find mounting holes on TV. Most TVs have 4, 6 or 8 holes, evenly spaced for mounting (fig 8).



fig 7

4. Secure clips (4) to TV with appropriate bolts. (Clips are approximately 4" long with center hole)

5. After clips are secure, slide 2 rails through clips and center them (fig 9).

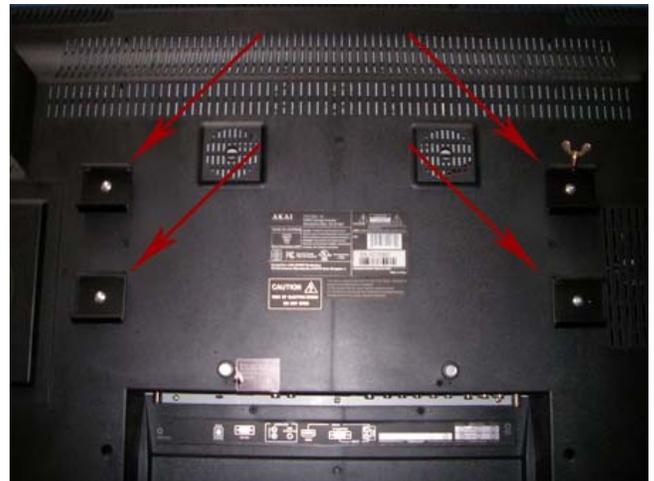


fig 8

fig 9


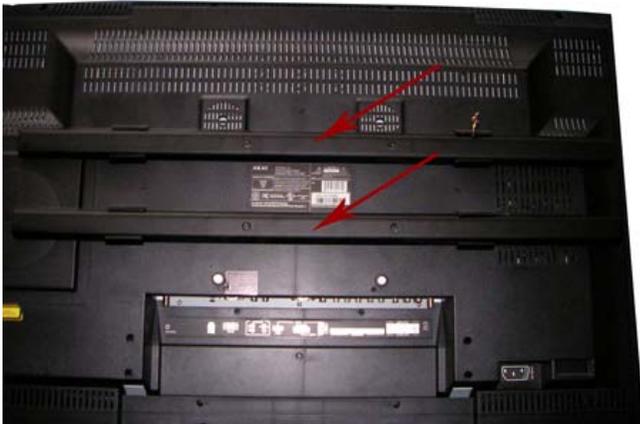


fig 12

6. Mount the "L" bracket (that you removed from the lift mechanism) to the cross bars (fig 12). (Crossbars have 5mm threaded holes.) Attach the "L" bracket to the two cross pieces with 4 (5mm) bolts and recess into beveled holes so they won't interfere with the raising and lowering of the lift. Lock with thumb screw provided. You will not be able to lock the rails to the clips until the L-Bracket is attached.

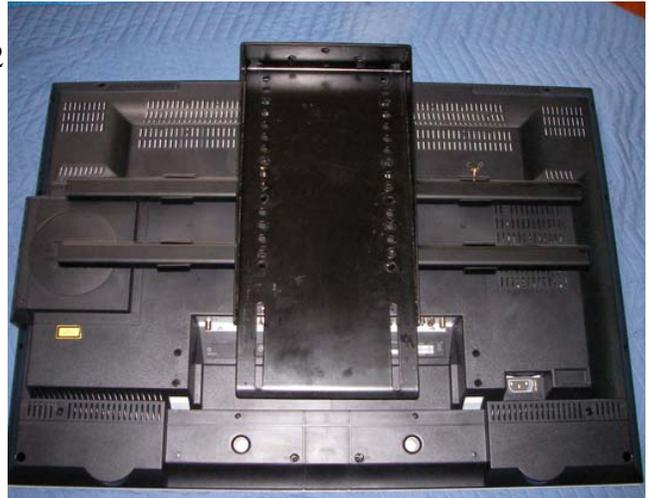

***Note: Top of "L" bracket should be even with the top of TV on all bedroom units.**

7. **IMPORTANT!** Two people are required for this step. Have two bolts ready to secure "L" bracket. Raised the lift about 3/4 of the way up. Lift TV and place "L" bracket on Lift. **Hold steady** and place three bolts in the top to secure, but do not completely tighten.

8. Person in front should center the TV while the person behind TV tightens center bolt first and then tightens the two side bolts. This sequence pushes the TV slightly away from the Lift which reduces the chance of the lift catching on the "L" bracket.



fig 13

9. **CAREFULLY** lower TV into cabinet by pressing remote "Down" button. Hitting the remote's "Up" button will stop the down motion. Check to see that there is enough room for accessory components on the bottom area of cabinet (fig 13).

10. Attach all accessory components making sure all cable lengths are sufficient (6 foot minimum) so they won't get pulled out when TV rises to full UP position.

11. Plug components and Lift cable into (customer supplied) power strip. Cables can slide through holes in back of cabinet.

***Note: Do not plug components into factory strip in cabinet, as it powers down when Lift goes down. This strip is used for cabinets with lights.**

You are now ready to enjoy your system!

Touchstone Home Products
50 Mountain View Rd
Warren, NJ 07059
Telephone: (800) 215-1990
Fax: (908) 934-9235
E-mail: info@touchstonehomeproducts.com