

MX Disc Publisher Quick Reference Guide

for Mac OS X

For a more in-depth look at the installation and configuration process, please refer to the appropriate sections of the User's Manual.

Be sure your computer meets the Minimum System Requirements as stated in the User's Manual and that you have read these instructions and the Manual prior to contacting Microboards Technical Support with installation or configuration questions!




MX Disc Publisher Installation

1. Unpack the MX Disc Publisher and place it in the selected workspace. This space should have enough vertical space to allow for easy loading of media into the input hopper and have enough room behind the MX Disc Publisher to allow the unloading of any rejected discs.
2. Insert the MX Disc Publisher Installation disk into the CD/DVD ROM drive on your Mac. Open the drive after the drive mount appears on the desktop.
3. Double-click the **Microboards Installer.mpkg** icon. Follow the on-screen instructions, read and agree to the end user license agreement.
4. When prompted, enter your administrator password.
5. When prompted, click **Install**. Once the installation has completed, click **Restart**.
6. Install all four ink cartridges and both printheads.
7. Plug in the AC power cord to the back of the MX Disc Publisher.
8. Connect the square shaped end of the USB cable to the back of the MX Disc Publisher.
9. Connect the flat end of the USB cable into a USB 2.0 port in your Mac.
10. Turn on the MX Disc Publisher.

Adding the MX Printer

1. Click the **System Preferences** icon in the Dock.
2. Select **Print & Fax**. If the **PF-Pro** printer has not been added automatically, then click the **Add** or **+** button to add a printer.
3. Select **PF-Pro** from the list and click the **Add** button.
4. Once the **PF-Pro** series Printer has been added, it will appear in the available printers list.

Installation of the MX Disc Publisher is complete.

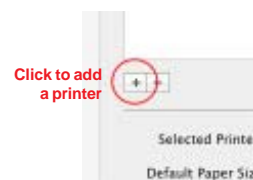

PrintWrite for Mac for Microboards Publishers

The MX Disc Publisher robotics will be automatically recognized by PrintWrite. When the application is launched, the MX will be cycled through it's initialization sequence.

Having more than one Microboards Disc Publisher connected to the Mac is not supported.

If you need to check the robotics after the initialization is complete, select the **Test Robotics** option in the **Utilities** menu. The drive will open, the singulator will cycle, and the media elevator will lift and lower.


Please see the PrintWrite for Mac manual for more information on using PrintWrite.

Printer Alignment

Verify the printer alignment the first time you use the Publisher. You may need to align your printer before the printed images will be centered on the media. Changing the brand or type of media you are using may also require small alignment adjustments.

To align the printer, please follow the steps listed below:

1. Install the drivers and PrintWrite, then add the PF-Pro Printer as detailed in the **Adding the MX Printer** section to the left, or in the Installation section of the **User's Manual**.
2. Click the **System Preferences** icon in the Dock.
3. Select **Print & Fax** from the options in the System Preferences.
4. Highlight the **PF-Pro** printer and click the **Utility** button to open the Microboards Printer Utility.
5. Select **Disc Printing**.
6. Set the **Top** and **Left Side** alignment values to the necessary values.

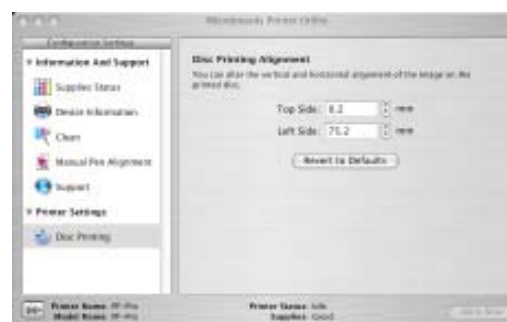

These settings will change the size of the top and left margins, respectively. Decreasing the values will move the image up or to the left, while increasing the values will adjust down or to the right.

7. Click the **Apply Now** button to save the changes, found on the bottom of the Microboards Toolbox window. Do not close the Toolbox until the printer is aligned.
8. Place a blank disc into the input hopper. Select a **Print Only** job in PrintWrite and print an image that will fill the print surface.
9. Check the printed disc. If the settings are correct, the image should be centered on the disc. If not, **repeat steps 6 through 9**, changing the **Top** and **Left Side** amounts as shown in the graphic to the right.
10. Fine tuning may be required for different brands of media or different printing applications to provide full surface coverage. Variations in types of printable media surfaces may also require you to make small adjustments.



For further details on these processes, please refer to the appropriate sections of the MX Disc Publisher User's Manual.

Installation Troubleshooting Guide

Hardware not installing	<ol style="list-style-type: none"> 1. Turn on power to MX Disc Publisher (back panel) 2. Reseat USB connection 3. Installation completed?
Printer not responding	<ol style="list-style-type: none"> 1. Has the MX Printer been added? 2. Turn on power to Printer (front panel). Firmly press the power button and wait several seconds for the printer power LED to come on.

In order to guarantee quality results from the MX Disc Publisher,

ONLY MICROBOARDS PFP MODEL INK CARTRIDGES CAN BE USED!

As is true with all printers, the quality of ink cartridge and the quality of the ink within the cartridge will affect your output. To ensure quality results, the MX Disc Publisher will not operate with any other color ink cartridge in place.

The use of refilled ink cartridges will void your warranty!